




VISUAL LAND
Bring the World Home

THE V-TAP™

QUICK START GUIDE

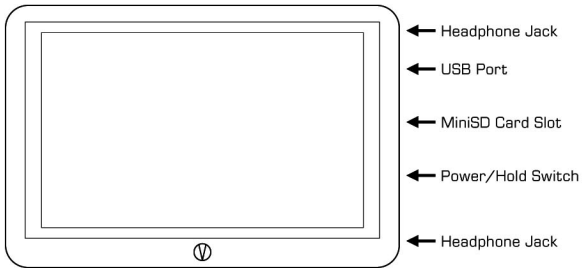

POWER

1. To power on, hold the ON/OFF switch up on the side of the player for 3 seconds.
2. To lock the player, tap the ON/OFF switch up once, unlock with screen by sliding the blue arrow on the screen to the right.
3. To power off, push the ON/OFF switch down once for soft power off, hold it down for complete power off.

NAVIGATION

1. Arrow and selection options will appear in the lower left corner for most sections.
2. To enter an option from the main menu, tap the icon once, once in the menu, you will have to tap an option once to highlight it, then once more to select it.

CHARGING

1. The player will automatically enter into Stand-by Mode when the battery level is low.
2. The player may be charged through a standard USB wall charger or through your computer via USB cable. The battery indicator will flash, showing the player is charging.

FILE SUPPORT

1. VIDEO (Actual Screen Resolution: 480x272, 128kbps, 25fps / Supported Resolution: 800x600): AVI, MPG, FLV, RM, RMVB, MP4, 3GP
2. AUDIO: MP3, WMA, FLAC, OGG
3. IMAGE (1800x1800 max resolution): JPG, BMP, GIF (animated)
4. TEXT: TXT

CONNECTING

1. Your V-Tap works like a USB Flash Drive when connected to the computer. It will be detected as an external drive.
2. To copy files over, simply drag and drop files into the player's appropriate folders.
3. For the full user's manual, connect your player to the computer and open the drive folder. The user manual is in Adobe Acrobat PDF format: [vtap_manual.pdf](#).